


RIDGE 2.0 QUICK START GUIDE

START HERE

 
1 Carefully unpack box.

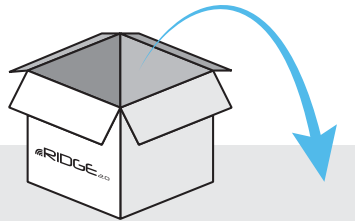


2 Make sure all components are present.



Keypad Unit



Transceiver Unit

 

9-V Battery



Key



Carriage Bolt
(x4)




Hex Nut
(x4)

What's what?

All the important internal components labeled for you

9-V Battery

Must be installed before use.

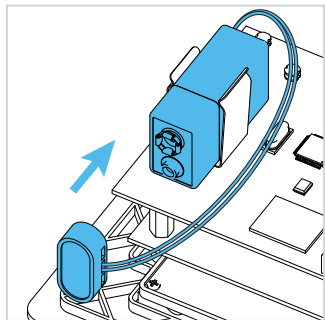

Nightlight/Status LEDs

Illuminate keypad and give helpful feedback

Reset Button

For performing reset procedures on keypad

Connection Terminals


For wiring to compatible AC/DC power source and gate operator or door opener

Relay Status LED

Indicates whether relay is active or inactive (Relay is active when lit)

Keypad Unit

Back of front panel shown with 9-V battery installed
Internal wiring not shown for clarity.

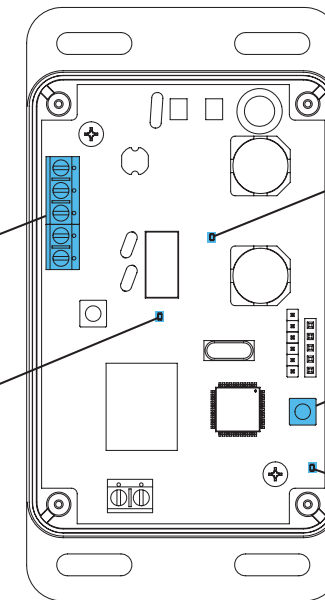

Power LED

Indicates whether or not unit has power

Programming Button

For pairing transceiver to keypad


Programming LED

Indicates status of pairing process


Transceiver

Shown with cover removed.
Internal wiring not shown for clarity.

3 Unlock and remove front panel of keypad unit, then using included carriage bolts and hex nuts, attach unit to pedestal as shown.

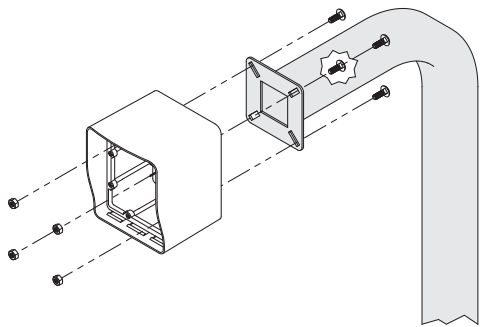

4 Using TEK screws, zip ties, or another type of fastener (not included), attach transceiver to inside wall or another surface of gate operator.

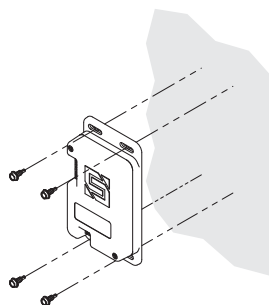

CAUTION!

Transceiver is not weatherproof and must be mounted inside a weatherproof enclosure. Internal components can be damaged if exposed to the elements.

Failure to comply will VOID WARRANTY.



WARNING!


AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!
ALWAYS CHECK that the **GATE PATH IS CLEAR BEFORE OPERATING!**
REVERSING or other **SAFETY DEVICES SHOULD ALWAYS BE USED!**

5a Connect transceiver

Gate Operator Timer-to-Close
OFF

Ridge Transceiver

Gate Operator / Door Opener

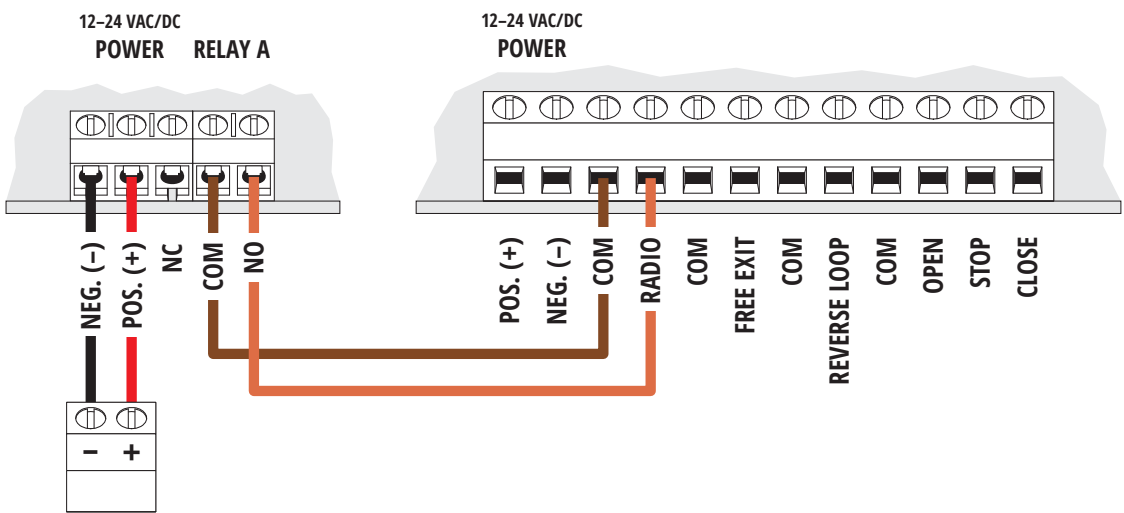

12-24-VAC/DC
Power Source
(Not Included)


OR

5b Connect transceiver

Gate Operator Timer-to-Close
ON

Ridge Transceiver

Gate Operator / Door Opener

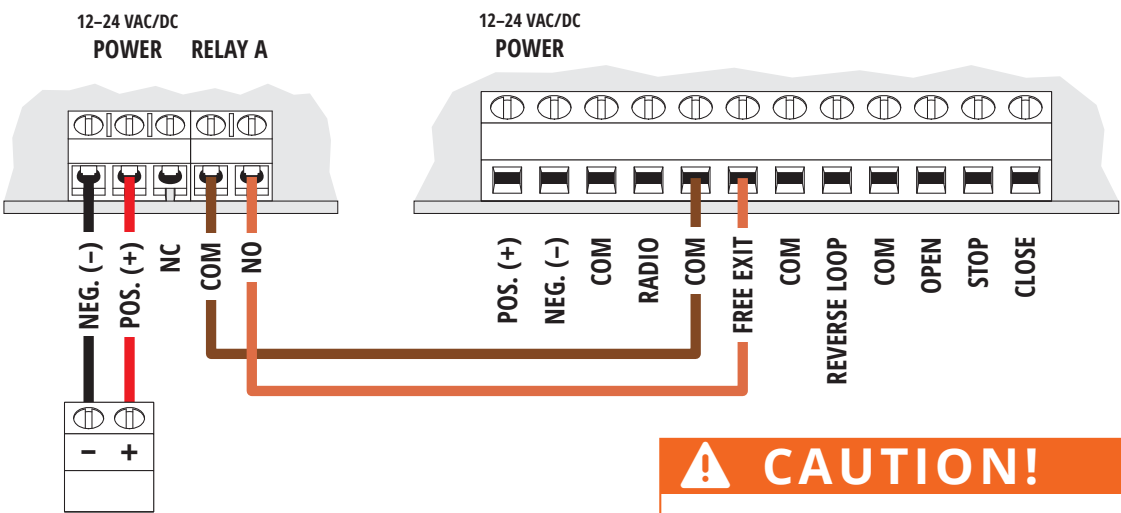

12-24-VAC/DC
Power Source
(Not Included)




CAUTION!

A closing gate can cause injury to persons or damage to property.

ALWAYS USE SAFETY DEVICES!

6a

Press and hold Programming button on transceiver circuit board for 1 second then let go.

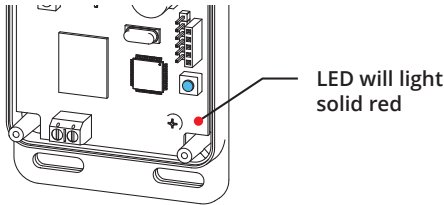

6b

Pair keypad with transceiver by entering sequence below on keypad.
(Make sure 9-V battery is connected to keypad)

1251

→

9

→

1

→


*

Master Code
(can be changed)

Channel
(1 for A, 2 for B)

6c

While pairing, keypad will beep and LEDs will flash. Once pairing is complete, keypad will sound a "good" tone and transceiver LED will go out.

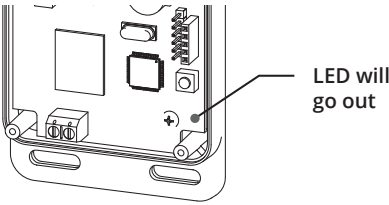

7

Add Access Code to Channel A.
(To add multiple codes, enter them all before pressing pound key)

1251

→

1

→

?

?

?

?

→

#

Master Code
(can be changed)

Access Code
(4 digits)

8

Make sure gate path is clear, then enter access code on keypad and confirm gate opens.
(If keypad locks up, repeat Step 6)





INSTALLATION COMPLETE!
Your system is ready to use.

Additional programming commands

A

Delete Code
(To delete multiple codes, enter them all before pressing pound key)

1251

→

2

→

?

?

?

?

→

#

Master Code
(can be changed)

Code to Be Deleted
(4 digits)

B

Set Unique Keypad ID
(Allows multiple keypads and transceivers to be used. If Keypad ID is changed, keypad and transceiver must be paired again.)

1251

→

9

→

5

→

?

?

?

?

→

#


Master Code
(can be changed)

Unique Keypad ID
(4 digits)

www.QuickShipAluminumFence.com | (800) 878-7829 | Sales@QuickShipAluminumFence.com

 More programming commands


Change Master Code

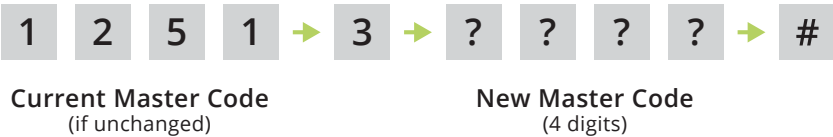

Add Latch Code




One-Time-Use Code (Channel A ONLY)

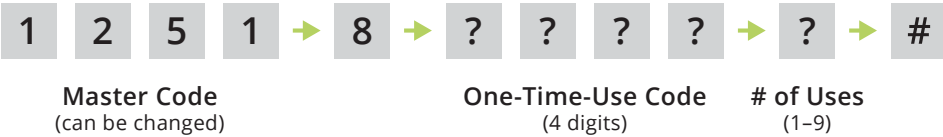

Add Access Code to Channel B


(To add multiple codes, enter them all before pressing pound key)

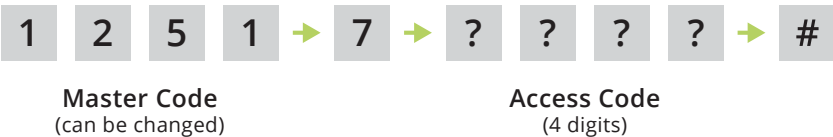

Delete All Codes (Cannot Be Undone)



Change Relay Output Time

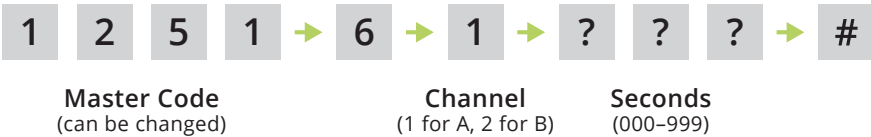

Three Strikes, You're Out

Check Status



Turn On or Off

